

# **The Home Arcade**

PLAY THE CLASSICS AT HOME

## **Arcade Driving Manual for Stand Up cabinet**

Online tutorials can be found at [www.thehomearcade.ca/tutorial](http://www.thehomearcade.ca/tutorial)

To turn on the arcade cabinet flip the switch located at the back top right hand side of the cabinet. Once the cabinet has been turned on you will see the "Corvette Wallpaper" after a few seconds. RetroFE will automatically start. Use the Steering Wheel D-Pad to navigate and "A" button to enter. To start a game example "Batman", select Games then press "A" Button to enter the game menu, then use D-Pad Left/Right to scroll to the desired game. Press the "A" Button to select Batman. Press the Gas Pedal to start the game.

### **Exit Game**

To Exit a game, press the PlayStation button lower part of the Steering Wheel. Alternate Exit buttons if this doesn't completely exit. Press and hold Line Button (right of center steering wheel) then press Box button r (right of center steering wheel). Last way is to hold the RSB button then press the LSB. The reason for numerous Exit is the emulators running in the background of RetroFE.

### **Volume**

To turn down the volume open the coin door to access the amplifier. Amplifier is on the right and side. Main volume is the knob and subwoofer volume, is the smaller knob at the bottom.

### **Shutdown & Exit Game**

To exit a game, press the "B" button in the main menu. To shut down the Arcade Driving Cabinet, select Shut Down.

### **Restarting**

If the Force Feedback has turn off after exiting a game, press "B" to top menu and select "Restart" this will restart RetroFE and turn Force Feedback on. The Force Feedback will turn off once exiting the game and should automatically turn back on. Some emulators turn off the Force Feedback differently so Logitech Force Feedback will reactivate.

### **Options Menu**

In the Top Menu you have options. "Restart" restarts the RetroFE frontend. "Exit" turns off RetroFE and goes to Windows. "Shutdown" turns off PC so you can turn off cabinet. "Settings" to setup the Logitech Steering Wheel or Xbox 360 controller. You shouldn't go into this option.

### **LCD Display Power Button**

LCD power button is located at the back right corner behind the monitor. You can just see the green glow when arcade cabinet is turned on.

### **Maintenance**

Speakers & Marquee light- Remove the 3 screws holding the top L channel in place. Remove L channel; pull up on the Marquee (tight fit). You will now have access to the speakers and light. To remove light slide to the left, the light will then be free.


Bezel, push the Plexiglas forward/up then pull the pickup the Plexiglas and pull towards you. To replace the Bezel, place Plexiglas against monitor and push forward until base of the bezel slides into the slot to lock in place.

### **Access Windows / Update Backup**

Plug in USB keyboard and mouse to PC. Turn on Arcade Cabinet, once Hyperspin is running press "CTRL + ALT + DEL" on keyboard, then find the mouse pointer and click Task Manager. First you can close Hyperspin, click Hyperspin then End Task. Now click on "New Task", type in "Explorer". This will start Microsoft Explorer. You can now move around in explorer. To open Deep Freeze, go to task bar located bottom right corner next to the clock, hold down the Left Shift button and double click the Deep Freeze Icon (Polar Bear). Passcode to unlock is "12345678". You can reboot Thawed or Frozen. To update the software, reboot in Thawed mode, update software, then reboot in Frozen mode.

## Button Mapping and Steering Wheel Controls.

Button Mapping and Steering Wheel controls PDF below and one can be downloaded from our website [www.thehomearcade.ca/tutorial](http://www.thehomearcade.ca/tutorial)

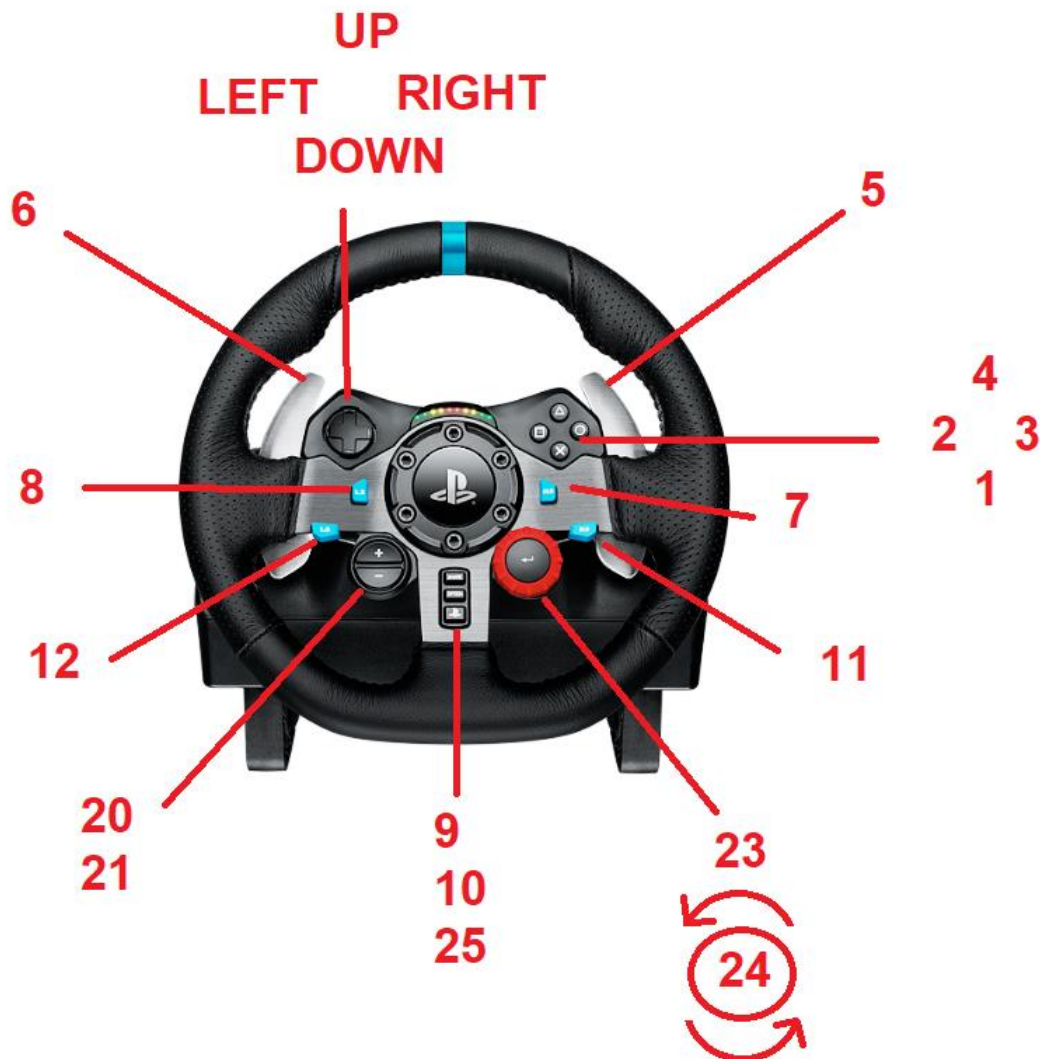

DPad – Navigate menu (up/down/left/right)

1. X (Select)
2. [ ] (Back)
3. O (Add to favorites)
4. \ / (Remove from favorites)
5. Paddle – Letter Down
6. Paddle – Letter Up
7. Playlist Favorites / Games. Switched between menus.
8. Select / Start Game
20. Volume Up
21. Volume Down
- Exit Combo 7 & 3

	0	1	2	3	7	6	9	8					5	4	10
	A	B	X	Y	View	Menu	LSB	RSB	D-Up	D-Down	D-Left	D-Right	Left Flipper	Right Flipper	Xbox
Auto Modellista		View	Look Back		Coin	Start/Pause									Exit
Batman					Coin	Start							U-Turn	Fire	Exit
California Speed	View	Radio	View	View	Coin	Start									Exit
Cars (Disney)	Boost/Start	Chatter	Flip	Jump	Coin	Start			Volume +	Volume -					Exit
Crash Team Nitro Fueled Racing					Pause	Menu				Reverse			Jump	Jump	Exit
Cruis'n Blast	Enter		View	Music	Pause	Menu			Menu	Menu	Menu	Menu	Boost	Drift	Exit
Cruis'n USA	View	Radio	View	View	Coin	Start									Exit
Cruis'n World	View	Radio	View	View	Coin	Start									Exit
DIGP Arcade	View	Side Brake			Coin	Start							Shift Down	Shift Up	Exit
Daytona Championship USA 3	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Daytona Championship USA 3: New Se	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Daytona USA	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Daytona USA 2: Battle on the Edge	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Daytona USA 2: Power Edition	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Dirt 3		Pause			Coin	Start			Menu	Menu	Menu	Menu			Exit
Dirt 4				View	Coin	Start / Pause	Look Back		Menu	Menu	Menu	Menu			Exit
Dirt Devils	View				Coin	Look Back									Exit
Dirty Drivin'			View		Coin	Start								Fire	Exit
Driver San Francisco					Map	Start			Menu	Menu	Menu	Menu			Exit
Emergency Call Ambulance	View				Coin	Start									Exit
F-Zero GX			View	View	Coin	Pause									Exit
F122 (Formula One 2022)					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
Fast n Furious Drift	Nitro	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Fast n Furious Super Cars	Nitro	View	View	View	Coin	Start			Music				Shift Down	Shift Up	Exit
Fast Racing Neo					Coin	Start							Bank Left	Bank Right	Exit
Ford Racing	View				Coin	Start							Shift Down	Shift Up	Exit
Forza Horizon 5					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
Gravel	Look Back				View	Start			Look	Look	Look	Look			Exit
GRID					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
GRID 2					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
GRID Autosport					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
Grid Race Driver					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
H2 Overdrive			View		Coin	Start			Volume +	Volume -					Exit
Indy 500 Deluxe	View	View			Coin	Start									Exit
Initial D Arcade Stage 6 AA					Coin	Start			Menu	Menu	Menu	Menu	Shift Down	Shift Up	Exit
Le Mans 24	View	View	View	View	Coin	Lights									Exit
Mario Kart GP 1	Throw				Coin	Start									Exit
Mario Kart GP2	Throw				Coin	Start									Exit
Mario Kart 8 (Wii U)	Throw		Look Back		Horn	Jump									Exit
Mario Kart Double Dash!!			Switch		Coin	Pause	Pause	Map					Drift	Drift	Exit
Mario Kart DX (Arcade)	Enter		Mario	Banapass	Coin	Start			Menu	Menu				Item	Exit
Off Road Challenge	View	Radio	View	View	Coin	Start									Exit
Out Run					Coin	Start								Gear	Exit
Out Run 2 Special Tours Super Deluxe	View				Coin	Start							Shift Down	Shift Up	Exit
Out Runners		Music		Music	Coin	Start								Gear	Exit
Over Rev	View				Coin	Start									Exit
Pole Position					Coin	Start								Gear	Exit
Pole Position 2					Coin	Start								Gear	Exit
R-Tuned: Ultimate Street Racing	Boost	Boost	View		Coin	Start							Shift Down	Shift Up	Exit
San Francisco Rush 2049 Special Editio	Music	View	View	View	Coin	Start									Exit
San Francisco Rush the Rock - Alcatraz	Music	View	View	View	Coin	Start	Abort								Exit
Scud Racing	View	View	View	View	Coin	Start									Exit
Sega Race TV	Boost		View		Coin	Start							Shift Down	Shift Up	Exit
Sega Rally 2	View				Coin	Start									Exit
Sega Rally 3	View	Hand Brake			Coin	Start							Shift Down	Shift Up	Exit
Sega Rally Championship	View				Coin	Start									Exit
Sega Touring Car Championship	View	View			Coin	Start									Exit
Sonic Racing	Item				Coin	Start									Exit
Storm Racer G	Boost	View			Coin	Start			Menu	Menu	Menu	Menu			Exit
Super GT 24H	View	View			Coin	Look Back									Exit
Virtua Racing	View	View	View	View	Coin	Start							Shift Down	Shift Up	Exit
Wacky Racers			View		Coin	Start								Lever	Exit
Wangan Midnight Maximum Tune 5	Perspective	Enter		Interruption	Coin	Start			Menu	Menu			Shift Down	Shift Up	Exit
Wangan Midnight Maximum Tune 6 R	Perspective	Enter		Interruption	Coin	Start			Menu	Menu			Shift Down	Shift Up	Exit

# The Home Arcade

PLAY THE CLASSICS AT HOME



Website [www.thehomearcade.ca](http://www.thehomearcade.ca) Email [info@thehomearcade.ca](mailto:info@thehomearcade.ca) Current games [www.thehomearcade.ca/games](http://www.thehomearcade.ca/games)

Phone 519-572-6011 Address 103 Hume Dr, Cambridge.