

THE HOME ARCADE

PLAY THE CLASSICS AT HOME

Arcade Retro Shooter Manual

Online tutorials can be found at www.thehomearcade.ca/tutorial

To turn on the arcade cabinet flip the switch located at the back top right hand side of the cabinet. Once the cabinet has been turned on you will see the "Arcade Wallpaper" after a few seconds. RetroFE will automatically start. Use the 4 directional buttons in the center of the control panel navigate to the "Games" section. Use the white Player 1 button to select. To start a game example "Transformers", select Games then press the white Player 1 button to enter the game menu.

Select and Start a Game

Once you have chosen your game, read the first line of the game details in game menu. This will tell you how to start the game.

P1 - Press white Player 1 button or press white Coin button then press white Player 1 button.

P1+Coin - Hold the white Coin button then press white Player 1 button.

Gun Trigger – Use gun trigger to select in game menu options.

Left or Right Gun button – Use left or right button in game menu to select / start the game.

Exit Game

To Exit a game, press the Exit button on the center of the control panel. Some games require you to Exit the in-game menu before going back to Main Arcade Game menu.

Settings


You can Hide or Unhide the Windows Cross Hair cursor. Default the cursor is turn to "Hide". This isn't the normal mouse cursor, but a Cross Hair version. Some games do not have a cross hair, so turning on the cursor could help some people aim/hit targets.

Volume

To turn down the volume open the coin door to access the amplifier. Amplifier is on the righthand side. Main volume is the knob.

Holding Gun and Line of Sight

Stay at least 3 feet back from monitor and make sure the IR Sensor located on top of the monitor has line of sight to the light guns. Similar to Nintendo Wii.

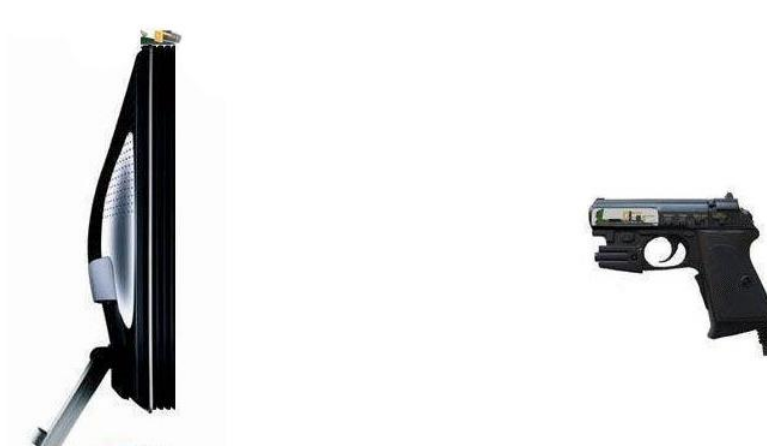

Light Gun Buttons

You have a single trigger, Left and Right buttons will be used for reload, 2nd or 3rd devices can be used for grenades, flame thrower, duct, stand or move left or right per each game.



Control Panel

Player 1 and 2 white buttons are to select games.

Coin buttons to coin up games that are not on Free Play.

Navigate buttons in center to move around menu.

Buttons next to holsters are additional buttons if the game requires a 4th action button. These buttons in the main menu are also for skipping to letters in the alphabet. Player 2 is to move down in alphabet.

Favorites

Add to Favorites press white Player 2, Remove from Favorites press Player 2 coin. To switch between Favorites and Regular menu Player 1 Coin

Shutdown

To exit a game button then backout to the main menu and select Shutdown, press the white Player 1 button.

Restarting

If the something goes wrong, exit back to main menu the select restart. This will restart the Arcade Front End.

LCD Display Power Button

LCD power button is located at the back right corner behind the monitor. You can just see the green glow when arcade cabinet is turned on.

Maintenance

Speakers & Marquee light- Remove the 3 screws holding the top L channel in place. Remove L channel; pull up on the Marquee (tight fit). You will now have access to the speakers and light. To remove light slide to the left, the light will then be free.

Bezel, push the Plexiglas forward/up then pull the pickup the Plexiglas and pull towards you. To replace the Bezel, place Plexiglas against monitor and push forward until base of the bezel slides into the slot to lock in place.

Access Windows / Update Backup

Plug in USB keyboard and mouse to PC via coin door. Turn on the Arcade Cabinet, select Exit to get to the windows screen. You can select Microsoft Explorer. You can now move around in explorer. To open Deep Freeze, go to task bar located bottom right corner next to the clock, hold down the Left Shift button and double click the Deep Freeze Icon (Polar Bear). Passcode to unlock is "12345678". You can reboot Thawed or Frozen. To update the software, reboot in Thawed mode, update software, then reboot in Frozen mode.

Known Issues - Games

THE HOME ARCADE
PLAY THE CLASSICS AT HOME



Website www.thehomearcade.ca Email info@thehomearcade.ca Current games www.thehomearcade.ca/games

Phone 519-572-6011 Address 103 Hume Dr, Cambridge.